











Note: Rockler may not carry all products and/or sizes listed in this vendor's publication

10C Battery Adapter Compatibility Chart

Nickel MH/CD



 
6V 7.2V 9.6V 12V 14.4V 15.6V 18V 19.2V 24V

(39550)		DEWALT 10C Adapter: DEWALT 10C Part No.: AD02	DW9046 DW9057	DW9048 DW9062 DW9061 XR	DW9050 DW9072 DW9071 XR	DW9094 DW9091 XR	DW9098 DW9095 XR2 DW9096 XR		DW0240
(33004)		MAKITA 10C Adapter: MAKITA 10C Part No.: AD03	6320074	6320024	1931575	1931583		1931591	1937377
(32843)		BOSCH 10C Adapter: BOSCH 10C Part No.: AD01			✓	BAT040 BAT141		BAT025 BAT181	BAT019 BAT020 BAT021 BAT024 BAT240
(31094)		MILWAUKEE 10C Adapter: MILWAUKEE 10C Part No.: AD04			48-11-1967 48-11-1970	48-11-2230		48-11-1024	
(27469)		PANASONIC 10C Adapter: PANASONIC 10C Part No.: AD06			EY9200B	✓	EY9230B	EY9251B	
Not available from Rockler		HILTI 10C Adapter: HILTI 10C Part No.: AD09			SBP120 SFB121 SFB125 SFB126		✓	SFB150 SFB155	SFB180 SFB185
(21355)		HITACHI 10C Adapter: HITACHI 10C Part No.: AD05			EB12 EB12S EB12B EB12M EB1224 EB12H EB1230H	EB14S EB14B EB1424 EB14H EB1430H		EB18B EB1820 EB1830H	
Not available from Rockler		RIGID 10C Adapter: RIGID 10C Part No.: AD07			✓	✓		✓	
		RYOBI 10C Adapter: RYOBI 10C Part No.: AD08			✓	✓	✓	✓	
(32843)		SKIL 10C Adapter: BOSCH 10C Part No.: AD01		96BAT	120BAT	144BAT		180BAT	

INGERSOLL RAND
CRAFTSMAN
FIRESTORM

Lithium Ion - Phosphate

7.2V 10.8V 12V 14.4V 18V 28V 36V

Not available from Rockler		MAKITA 10C Adapter: MAKITA LI 10C Part No.: LI01		BL7010		✓	BL1430	194205-3 194230-4
Not available from Rockler		BOSCH 10C Adapter: BOSCH LI 10C Part No.: LI03			BAT411			
Not available from Rockler		MILWAUKEE 10C Adapter: MILWAUKEE LI 10C Part No.:			48-11-2401		✓	48-11-1830 48-11-1815

Legend



Adapter Color Code



Adapter Won't Charge



Adapter Will Charge - No battery Reference